


- THROTTLE FREE PLAY ADJUSTMENT

Check that throttle free play is 2–4 mm (1/8–1/4 in) of grip rotation.

To adjust free play, loosen the lock nut and turn the adjuster.

Tighten the lock nut after adjustment.

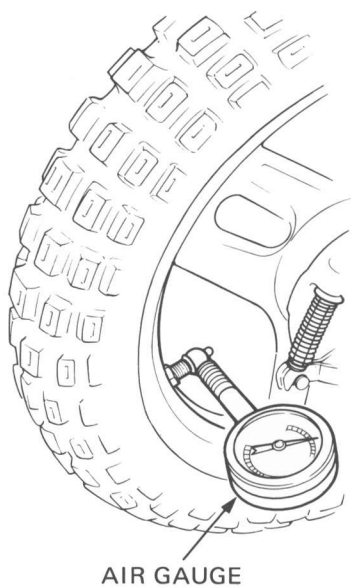

- TYRE AIR PRESSURE

Check tyre pressures frequently with an air gauge.

Tyre air pressures:

Front	100kPa (1.0 kg/cm ² , 14 psi)
Rear	100 kPa (1.0 kg/cm ² , 14 psi)

Proper air pressure will provide maximum stability, riding comfort and tyre life. If tyre pressures are incorrect, adjust as required.

Before riding, check the tyres for embedded nails, stones or sharp objects.