


REAR COWL

Removal:



1. Remove the seat (page 43).
2. Remove the six bolts (1).
3. Lift the rear cowl slightly and disconnect the brake/tail light connector (2).
4. Slightly spread the front of the rear cowl (3) and remove it.

NOTE:

- * Do not damage the sponge attached to the front inside of the rear cowl when removing and installing it.

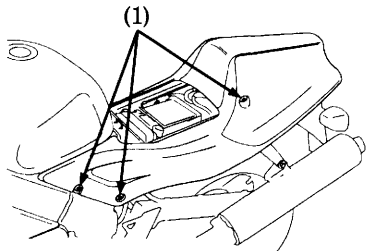

(1) Bolts (both side)

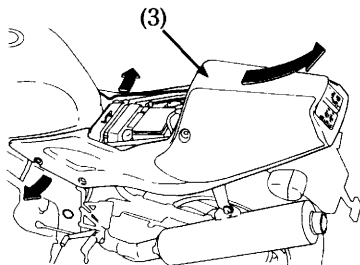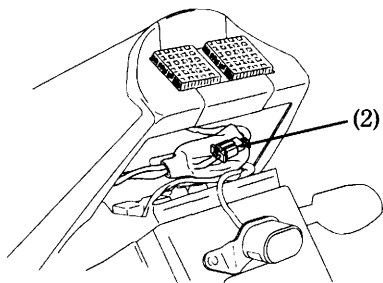

(2) Brake/tail light connector
(3) Rear cowl