
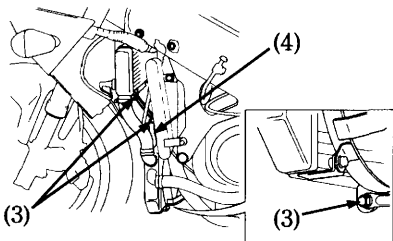


4. Remove the four bolts (3) and radiator bracket (4).


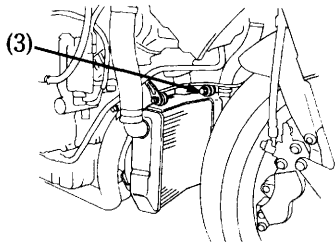


(3) Bolts

(4) Radiator bracket

5. Remove the lower radiator (5) from the hanger (6).

6. Pull the lower end of the lower radiator out enough to access the oil filter (7).

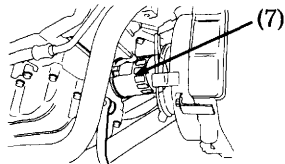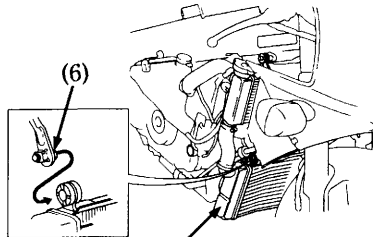

(5) Lower radiator

(6) Hanger

(7) Oil filter