


Preparation for front cylinder spark plugs


1. Remove both side of the middle fairing (page 46).
2. Remove the lower fairing (page 47).
3. Remove the left inner cover (page 48).
4. Remove the five bolts (1) and radiator bracket (2).

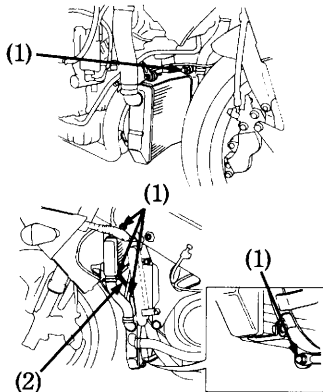

(1) Bolts

(2) Radiator bracket

5. Remove the lower radiator (3) and the upper radiator (4) from the hangers (5).
6. Pull the upper radiator out enough to access the spark plugs.

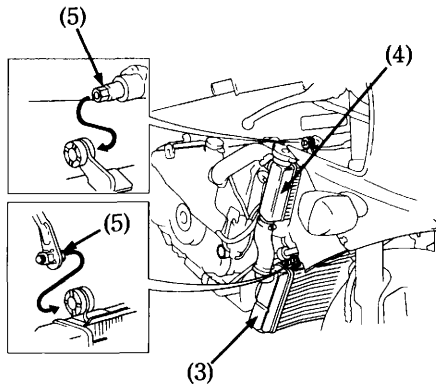

(3) Lower radiator

(4) Upper radiator

(5) Hangers