


Inspection/Replacement


1. Disconnect the spark plug caps from the spark plugs.
2. Clean any dirt from around the spark plug bases. Remove the spark plugs using the plug wrench (1) furnished in the tool kit.
3. Inspect the electrodes and center porcelain for deposits, erosion or carbon fouling. If the erosion or deposit is heavy, replace the plug. Clean a carbon or wet-fouled plug with a plug cleaner.

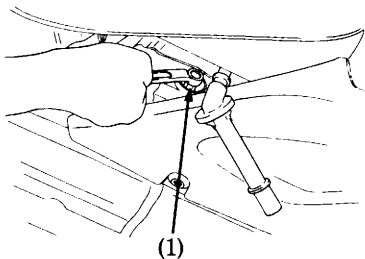

(1)

(1) Spark plug wrench

4. Make sure that the 1.0 mm wire-type feeler gauge does not insert between the spark plug gap (2). If the gauge is inserted into the gap, replace the plug with a new one.
5. Make sure the plug washer is in good condition.

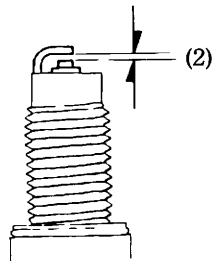

(2) Spark plug gap