

Fuse box:


The fuse box is located near the speedometer. The specified fuse are:

10A,20A



1. Remove the fuse box assembly (1) by removing the bolt (2).
2. Remove the fuse box cover holder (3) by removing the bolt (4).
3. Open the fuse box cover (5).
4. Pull out the old fuse and install a new fuse.

The spare fuses (6) are located in the fuse box.

5. Close the fuse box cover and install the removed parts in the reverse order of removal.

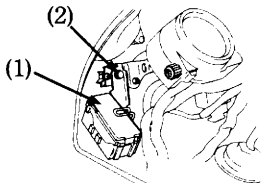

(1) Fuse box assembly (2) Bolt

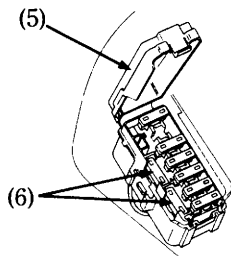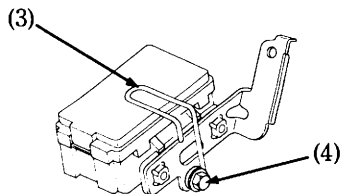

(3) Fuse box cover holder
(4) Bolt
(5) Fuse box cover
(6) Spare fuses