



Stop/Taillight Bulb

1. Remove the seat (page 43).
2. Remove the rear cowl (page 45).
3. Turn the socket (1) 90° counterclockwise and remove it.

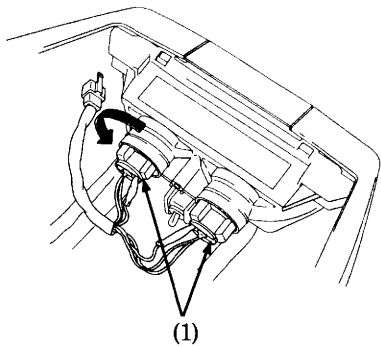

(1) Socket

4. Slightly press the bulb (2) and turn it counterclockwise.
5. Install a new bulb in the reverse order of removal.

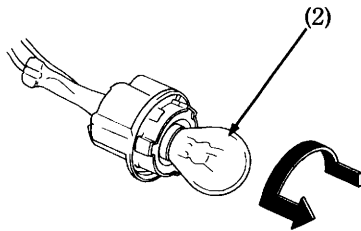

(2) Bulb