


License Light Bulb


1. Remove the license light cover (1) and license light lens (2) by removing the two nuts (3).

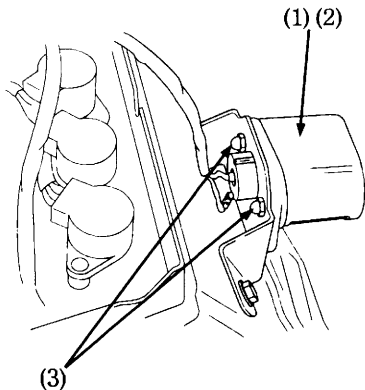

(1) License light cover
(2) License light lens

(3) Nuts

2. Slightly press the bulb (4) and turn it counterclockwise.
3. Install a new bulb in the reverse order of removal.

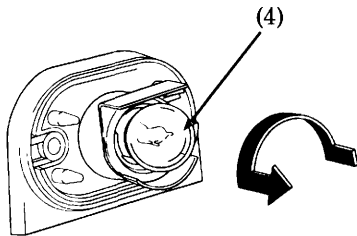

(4) Bulb