


Adjustment:

1. Make free play adjustments by turning the adjusting nut (3) at the brake arm. Make sure the cut-out on the adjusting nut is seated on the brake arm pin (4) after making final free play adjustment.

2. Apply the brake several times and check for free wheel rotation after the brake lever is released.

If proper adjustment cannot be obtained by this method, see your Honda dealer.

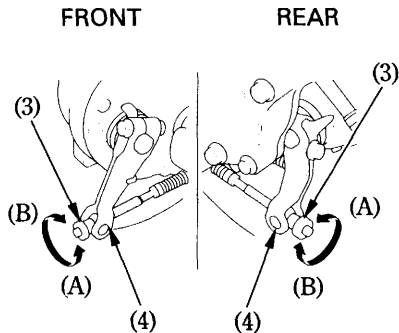

(3) Adjusting nut

(4) Arm pin

(A) Increase

(B) Decrease

