

## SEAT LOCK


The seat lock (1) is on the left side below the seat.

To lift the seat, insert the ignition key (2) and turn it clockwise to unlock.

To lock the seat, lower and push down on it until it locks. Make sure the seat is secure before riding.

### CAUTION:

\* Before locking the seat, make sure you have not left the ignition key in the compartment under it.

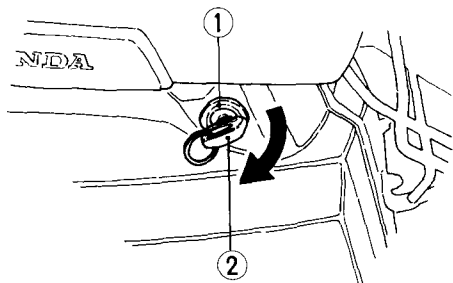

(1) Seat lock

(2) Ignition key