

Aluminum Wheel Maintenance

Aluminum corrodes when it comes in contact with dust, mud, road salt, etc. After riding, clean the wheels with a wet sponge and mild detergent, then rinse well with water and wipe dry with a clean cloth.

CAUTION:

- * **Do not use steel wool or a cleaner containing abrasives or compounds to clean the wheels, as they can cause damage.**
- * **Do not ride over a curb or rub the wheel against an obstacle, as wheel damage may result.**

Aluminum Handlebar Maintenance

The handlebar is made of an aluminum alloy. For your safety of others, be sure to replace the handlebar with a new one when it is bent or damaged due to toppling, etc.. Remember that a damaged aluminum handlebar can be broken off, resulting in serious accident or injury. For replacement, see your Honda dealer.

Exhaust Pipe Maintenance

The exhaust pipe is stainless steel but may become stained by oil or mud. If necessary, remove heat stains with a liquid kitchen abrasive.