
Check the tires for cuts, embedded nails or other sharp objects. Check the rims for dents or deformation. If there is any damage, see your authorized Honda dealer for repair, replacement, and balancing.

⚠ WARNING

- ***Improper tire inflation will cause abnormal tread wear and create a safety hazard. Underinflation may result in the tire slipping on, or coming off of the rim causing tire deflation that may result in a loss of vehicle control.***
- ***Operation with excessively worn tires is hazardous and will adversely affect traction and handling.***

Replace tires before tread depth at the center of the tire reaches the following limit or when the surface is flush with the wear indicators.

Minimum tread depth	
Front:	1.5 mm (0.06 in)
Rear:	2.0 mm (0.08 in)

