

---

For related torque specifications, see page 89. The numbers indicate the sequence of disassembly.

(For standard model)

