

# FRAME/WHEELS/BRAKES

---

## REAR WHEEL REMOVAL

### WARNING

- ***Wheel removal requires mechanical skill and professional tools such as a torque wrench. We recommend it be done only by your authorized Honda dealer or other qualified mechanic.***

### NOTE:

- For some temporary tubeless tyre repairs, wheel removal may not be necessary. See page 32, 33.

Refer to Maintenance Precautions on page 69.

1. Place the motorcycle on its center stand.
2. Remove the parts in sequence, according to the order in the illustration.

### NOTE:

- In case that the final driven flange tends to stay in the final drive spline, push the driven flange into the wheel by the pliers as shown number ⑦.
- When removing and installing the wheel, be careful not to damage the sensor and pulser ring. (Model equipped with CBS/ABS/TCS).