

MAINTENANCE

ITEMS	FREQUENCY	WHICHEVER → COMES		ODOMETER READING [NOTE (1)]								Refer to page	
		FIRST ↓ NOTE	× 1,000 km × 1,000 mi MONTH	1	6	12	18	24	30	36			
				0.6	4	8	12	16	20	24			
* FUEL LINE						I		I		I	—		
* THROTTLE OPERATION						I		I		I	99		
* AIR CLEANER	2						R			R	92		
SPARK PLUGS						I		R		I	97		
* VALVE CLEARANCE					EVERY 24,000 km (16,000 mi) I								—
ENGINE OIL				R		R		R		R	93		
ENGINE OIL FILTER				R		R		R		R	94		
ENGINE IDLE SPEED				I	I	I	I	I	I	I	100		
RADIATOR COOLANT	3					I		I		R	101		
* COOLING SYSTEM						I		I		I	—		
* SECONDARY AIR SUPPLY SYSTEM						I		I		I	—		
FINAL DRIVE OIL						I		I		R	102		
BRAKE FLUID	3				I	I	R	I	I	R	30, 32		
BRAKE PAD WEAR					I	I	I	I	I	I	112		
BRAKE SYSTEM				I		I		I		I	113		
* BRAKE LIGHT SWITCH						I		I		I	—		
* HEADLIGHT AIM						I		I		I	—		
CLUTCH SYSTEM						I		I		I	—		
CLUTCH FLUID	3				I	I	R	I	I	R	33		
SIDE STAND						I		I		I	104		
* SUSPENSION						I		I		I	—		
* NUTS, BOLTS, FASTENERS				I		I		I		I	—		
** WHEELS/TYRES						I		I		I	—		
** STEERING HEAD BEARINGS				I		I		I		I	—		