

# MAINTENANCE

---

## Rear Wheel Removal

We recommend wheel removal be done only by your Honda dealer or another qualified mechanic. Do not attempt to remove the wheel on your own. Wheel removal requires mechanical skill and professional tools.

1. Place the motorcycle on its center stand on firm, level ground.
2. Remove the saddlebags (page 59).
3. Remove the parts in sequence, according to the order in the illustration.
  - Avoid getting grease, oil, or dirt on the disc or pad surfaces. Any contamination can cause poor brake performance or rapid pad wear after reassembly.
  - When removing and installing the wheel, be careful not to damage the sensor and pulser ring (Model equipped with ABS).

