

# MAINTENANCE

---

## WHEEL REMOVAL

Refer to the Safety Precautions on page 77.

### Front Wheel Removal

We recommend wheel removal be done only by your Honda dealer or another qualified mechanic. Do not attempt to remove the wheel on your own. Wheel removal requires mechanical skill and professional tools.

1. Park your motorcycle on a firm, level surface.
2. Raise the front wheel off the ground by placing a support block under the engine, being careful to avoid contact with the exhaust pipe and front lower cover.
3. Remove the parts in sequence, according to the order in the illustration.
  - When removing and installing the wheel, be careful not to damage the sensor and pulser ring.
  - To avoid damage to the brake hose, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.  
Avoid getting grease, oil, or dirt on the disc or pad surfaces. Any contamination can cause poor brake performance or rapid pad wear after reassembly.
  - Avoid depressing the brake lever and brake pedal when the wheel is off the motorcycle.  
This will force the caliper piston out of the cylinders. The result will be a loss of brake fluid. If this occurs, the brake system will require service. See your Honda dealer for this service.