


Ignition Switch


The three position ignition switch ① is located on top of the right handlebar grip switch housing. In the "RUN" position (center) the ignition circuit will be completed and engine will operate. In the "OFF" position (either side of center) the ignition circuit will be open and the engine will not operate. This switch is intended primarily as a safety or emergency switch and can normally remain in the "RUN" position.

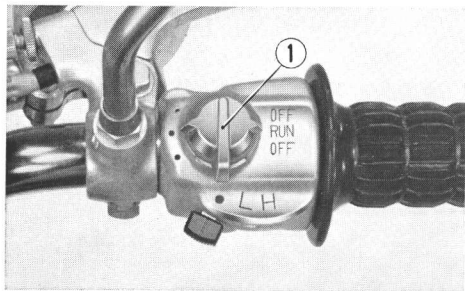

① Ignition switch

Headlight Switch

The headlight switch ② is located on the right handlebar grip switch housing. It can be operated without taking the hand off the handlebar grip. The red dot is the "OFF" position (headlight and taillight off). "L" is the low beam position (low beam light and taillight on). "H" is the high beam position (high beam light and taillight on). The headlight will only operate when the main switch is in the "ON" position.

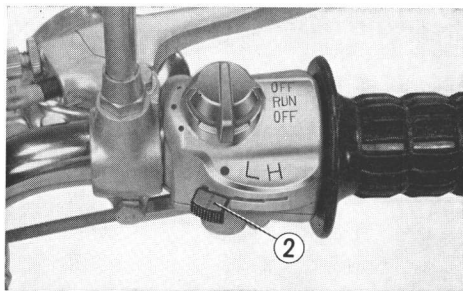

② Headlight switch