

## //////////////////////TIRE RECOMMENDATIONS////////////////////////////////////

Correct tire pressures will help extend tire service life and will provide the best handling characteristics and riding comfort. Check tire pressures frequently, and maintain the pressures shown in the following chart:

Cold tire pressures psi (kg/cm <sup>2</sup> )	Front: 18 (1.3)
	Rear: 24 (1.7)
Vehicle capacity load	220 lbs (100 kg) operator only
Tire size	Front: 3.00-14
	Rear: 3.00-14

### CAUTION:

- **Overinflation or underinflation of the tires will cause abnormal tread wear or other damage and create a safety hazard. Riding with underinflated tires will cause the tires to slip on the rims damaging the innertube valves. Severe underinflation may result in loss of the tire from the rim.**
- **Check tire pressures frequently and adjust if necessary.**
- **Replace the tires when the tread depth at the center of the tire is less than 0.12 in. (3 mm).**