


## AIR CLEANER

(Refer to the maintenance precautions on page 50).

The air cleaner should be serviced at regular intervals (page 45). Service more frequently when riding in unusually wet or dusty areas.


1. Remove the left side cover (page 31).
2. Remove the screws (1) and the air cleaner housing cover (2).

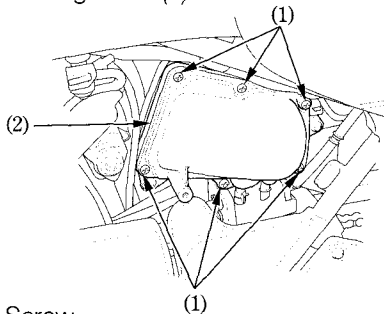

(1) Screw

(2) Air cleaner housing cover

3. Take out the air cleaner element (3) and clean the air cleaner element using compressed air from the outside, or replace it if necessary.
4. Install the air cleaner element.
5. Install the removed parts in the reverse order of removal.

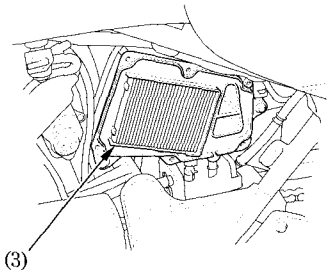

(3) Air cleaner