



Loosen the lock nut (④ lower or ⑤ upper), turn the adjuster (③ lower or ⑥ upper) to provide the correct clutch lever free play, then retighten the adjuster. Turning the adjuster in direction Ⓐ will decrease free play and turning the adjuster in the opposite direction will increase free play.

3. After the adjustment has been made, check to see that the clutch is not

slipping or that the clutch is properly disengaging according to the following procedure. After the engine starts, pull in the clutch lever and shift into gear, and make sure that the engine does not stall, nor the motorcycle start to creep. Gradually release the clutch lever and open the throttle, the motorcycle should start smoothly and accelerate gradually.

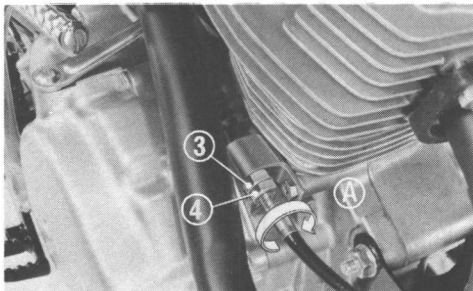

③ Clutch cable lower adjuster      ④ Lock nut

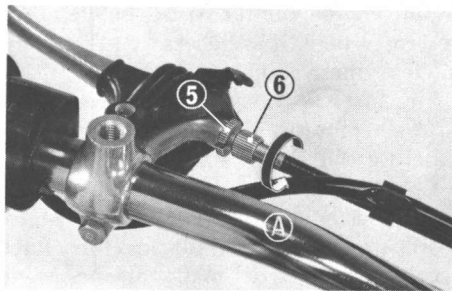

⑤ Lock nut      ⑥ Clutch cable upper adjuster