

# //////////////////// CONTENTS //////////////////////

	Page		Page
TRX SAFETY . . . . .	1	Carburetor . . . . .	43
DESCRIPTION . . . . .	6	High Altitude . . . . .	44
Parts Location . . . . .	6	Spark Plug . . . . .	46
Serial Numbers . . . . .	8	Air Cleaner . . . . .	47
Parts Function . . . . .	9	Valves . . . . .	48
Fuel . . . . .	16	Clutch . . . . .	50
Engine Oil . . . . .	18	Brakes . . . . .	51
Tires . . . . .	20	Throttle Cable . . . . .	54
OPERATION . . . . .	22	Drive Chain . . . . .	55
Pre-ride Inspection . . . . .	22	Battery . . . . .	56
Starting the Engine . . . . .	23	Spark Arrester . . . . .	58
Break-in . . . . .	26	STORAGE GUIDE . . . . .	59
Riding . . . . .	27	TRANSPORTING . . . . .	61
Parking . . . . .	36	SPECIFICATIONS . . . . .	64
MAINTENANCE . . . . .	37	WIRING DIAGRAM . . . . .	65
Maintenance Schedule . . . . .	37		
Tool Kit . . . . .	39		
Engine Oil . . . . .	40		
Oil Filter Screen . . . . .	41		
Fuel Strainer . . . . .	42		