


## Throttle Lever

The throttle lever (1) is next to the right handlebar grip and is operated by the rider's thumb. Pressing the lever forward opens the throttle. When the lever is released, spring tension closes the throttle automatically.

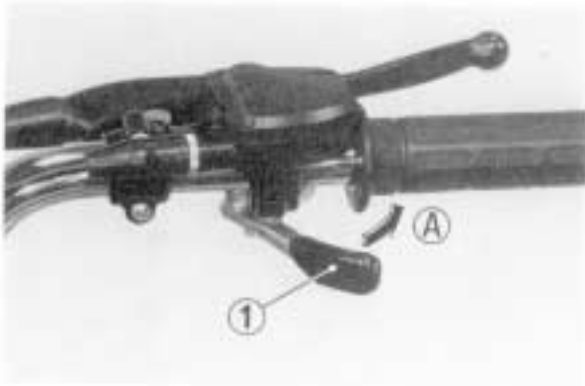

(1) Throttle lever      (A) Open

## Rear Brake/Parking Brake Lever


The front brake lever is at the right handlebar grip. The left brake lever (1) and the brake pedal both operate the rear brake. Either one can be used to stop the TRX. The left brake lever has the added feature of a lock (2) which allows the lever to be used as a parking brake.

Pull the left brake lever back and lock it with the lock. Always apply the parking brake when parking the TRX and when starting the engine.

The parking brake is unlocked by squeezing the left brake lever.

### NOTE:

\* Use of the parking brake in freezing weather may cause the brakes to freeze in the locked position.

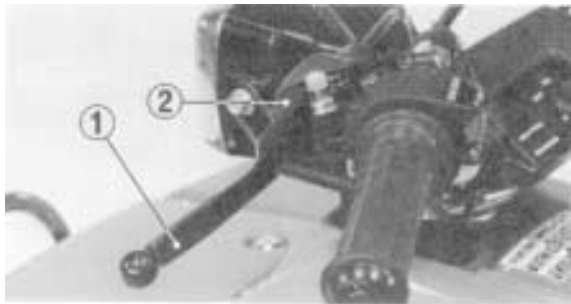

(1) Rear brake/Parking brake lever      (2) Lock