

## ENGINE OIL

### Engine Oil Level Check

Check engine oil level each day before operating the TRX.

The oil filler cap (1) is on the right crankcase cover and contains a dipstick for measuring the oil level. The oil level must be maintained between the upper (2) and lower (3) level marks on the dipstick. To check the oil level:

1. Unlatch and remove the seat.



- (1) Oil filler cap/dipstick (3) Lower level mark  
(2) Upper level mark

2. With the TRX on level ground, remove the oil filler cap/dipstick and wipe it clean.
3. Reinsert the dipstick without screwing it in. Remove the oil filler cap/dipstick again and check the oil level.
4. If required add the specified oil up to the upper level mark. Do not overfill.
5. Replace the filler cap/dipstick.

### CAUTION:

\* *Running the engine with insufficient oil can cause serious engine damage.*



- (4) Seat latch