

## SPARK PLUG

Standard spark plug

NGK: DR8ES-L  
ND: X24ESR-U  
CHAMPION: RA6YC

### CAUTION:


\* *The use of spark plugs of incorrect size or heat range can cause serious engine damage.*

1. Disconnect the spark plug cap.
2. Clean any dirt from around the spark plug base.
3. Remove the spark plug.
4. Visually inspect the spark plug electrodes for wear. The center electrode should have square edges and the side electrode should have a constant thickness. If the electrodes and insulator tip appear unusually fouled or burned, we suggest that you contact an authorized Honda dealer. Discard the spark plug if there is apparent wear or if the insulator is cracked or chipped.
5. Make sure that the spark plug gap is 0.6–0.7 mm (0.024–0.028 in) using a wire-type feeler gauge. If adjustment is necessary, bend the side electrode (1) carefully.

6. When installing the spark plug, screw it in finger tight and then tighten with the plug wrench another 1/2 turn to compress the washer. If you are reusing a spark plug, it should only take 1/8–1/4 turn after the plug seats.

### CAUTION:

\* *The spark plug must be securely tightened. An improperly tightened plug can become very hot and possibly damage the engine.*

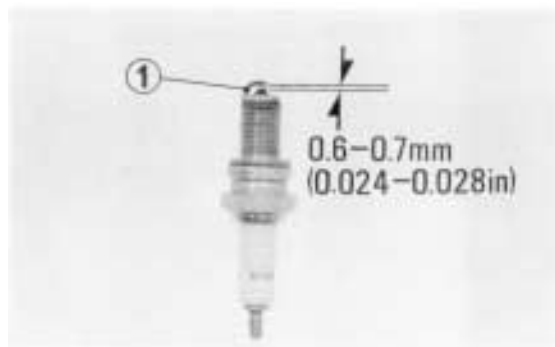

(1) Side electrode