


Rear Wheel Removal

1. Place a support block under the vehicle and raise the rear wheels off the ground.
2. Loosen the wheel nuts (1) and remove the wheel.

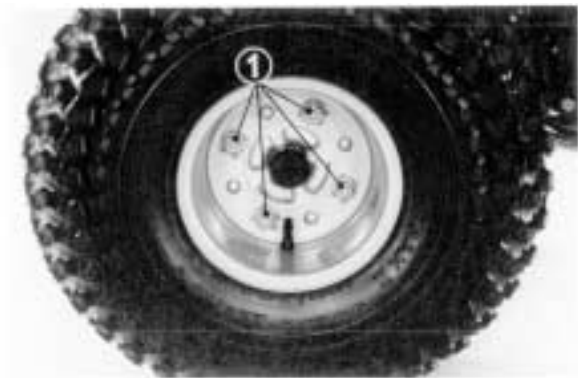

(1) Wheel nuts

Installation Notes:

Reinstall the front wheels and tighten the wheel nuts (1) in a crisscross pattern to 50–60 N·m (5.0–6.0 kg-m, 36–43 ft-lb).

WARNING

- * *If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly.*