

## Reverse Indicator Lamp

The TRX200 is equipped with a reverse indicator lamp to show when the Posi-Torque Speed Range and Reverse Selector lever is in Reverse position.

### CAUTION:

- \* Before moving the lever to the reverse position, make sure the transmission is in neutral.



(1) Reverse indicator lamp

## Engine Stop Switch

The three position engine stop switch (1) is next to the left handlebar grip. When the switch is in RUN position, the engine will operate. When the switch is in either OFF position, the engine will not operate. This switch is intended primarily as a safety or emergency switch and should normally remain in RUN.

### NOTE:

- \* If your TRX is stopped with the ignition switch ON and the engine stop switch OFF, the headlight will still be on, resulting in battery discharge.



(1) Engine stop switch