

Headlight

The headlight can be easily detached and used for work at night by connecting a extension cord included in the tool kit.

WARNING


* *Do not ride with the extension cord installed or it may interfere with the controls or wheels causing loss of control.*

CAUTION

* *Use the headlight with the engine running to prevent the battery from discharge.*

To detach the headlight from the TRX:

1. Pull the right and left lock pins (1) off.
2. Grasp the headlight case bracket (2) and pull the headlight down to remove it from the rubber mounts (3).

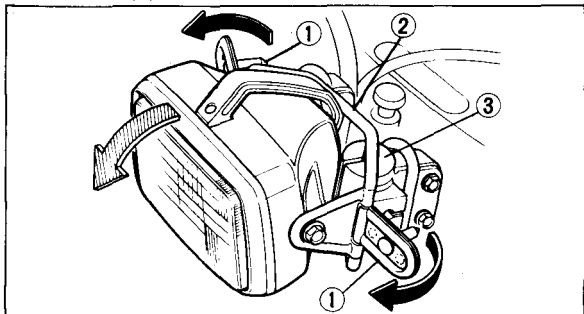

- (1) Lock pins (2) Headlight case bracket
(3) Rubber mount


3. Disconnect the headlight wire coupler (4) from the wire harness by releasing the lock tab and pulling the coupler.
4. Connect the extension cord (5) between the headlight and the wire harness.

NOTE:

- * Align the coupler lock tabs (6) with the notches (7).
5. To install the headlight onto the TRX, reverse the detaching procedure.

CAUTION

* *After installation, make sure that the headlight wire is not pinched.*

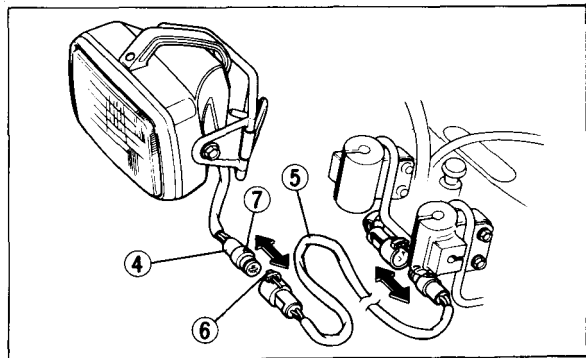

- (4) Wire coupler (5) Extension cord
(6) Lock tab (7) Notch