

VALVES

Valve clearance should be maintained at 0.05 mm (0.002 in). Excessive clearance will cause noise. Insufficient clearance will cause loss of power and could cause valve damage.


NOTE:

- * Check and adjust valve clearances while the engine is cold. The clearance will change as the temperature rises.



- (1) Fuel tank cover
- (2) Screws

1. Remove the fuel tank cover (1) by removing the two screws (2).
2. Turn the fuel valve OFF and disconnect the fuel line at the fuel valve.
3. Remove the two fuel tank mounting bolts (3) and the fuel tank (4).
4. Remove the timing mark cover and valve adjusting caps.

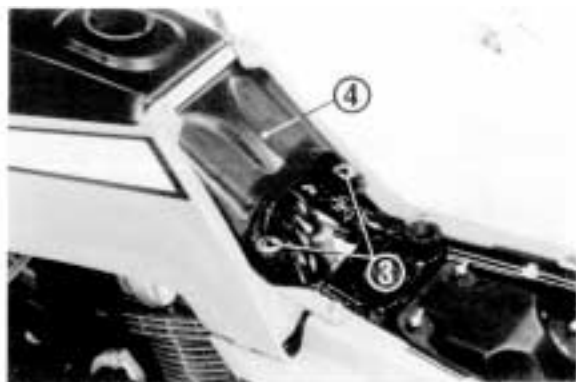

- (3) Tank mounting bolts
- (4) Fuel tank