

## CAM CHAIN

An improperly adjusted cam chain will adversely affect engine performance. The cam chain will rattle and be noisy if it needs a tension adjustment.

To adjust the cam chain:


1. Start the engine and let it idle.
2. Remove the rubber cap (1) and loosen the tensioner adjusting bolt (2).

When it is loosened, the cam chain tensioner will automatically position itself to provide the correct cam chain tension.


3. Retighten the tensioner adjusting bolt and install the rubber cap.

### NOTE:

- \* Do not attempt to loosen the 6mm bolt (3) while adjusting.

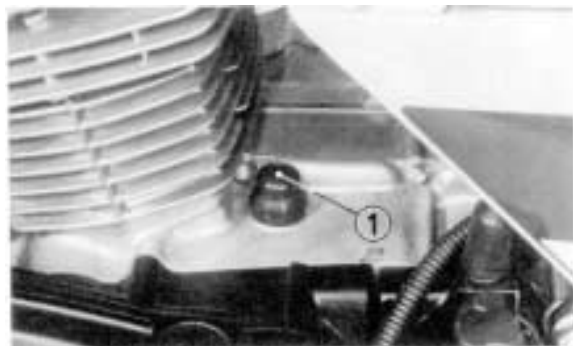

(1) Rubber cap

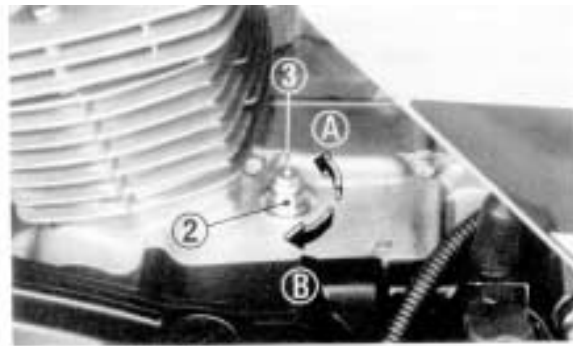

(2) Tensioner adjusting bolt (A) Loosen to adjust  
(3) 6mm bolt (B) Tighten