

Front Wheel Removal

1. Place a support block under the engine to raise the front wheels off the ground.
2. Loosen the wheel nuts (1) and remove the wheel.

Installation Notes:

Reinstall the front wheels and tighten the wheel nuts (1) in a crisscross pattern to 20–25 N·m (2.0–2.5 kg·m, 14–18 ft·lb).

WARNING

** If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly.*



(1) Wheel nuts