

ENGINE OIL

Engine Oil Level Check

Check engine oil level each day before operating the FOUR TRAX.


The oil filler cap (1) is on the right crankcase cover and contains a dipstick for measuring the oil level. The oil level must be maintained between the upper (2) and lower (3) level marks on the dipstick.

To check the oil level:


1. With the FOUR TRAX on level ground, remove the oil filler cap/dipstick and wipe it clean.
2. Reinsert the dipstick without screwing it in. Remove the oil filler cap/dipstick again and check the oil level.
3. If required add the specified oil up to the upper level mark. Do not overfill.
4. Replace the filler cap/dipstick.

CAUTION

* *Running the engine with insufficient oil can cause serious engine damage.*

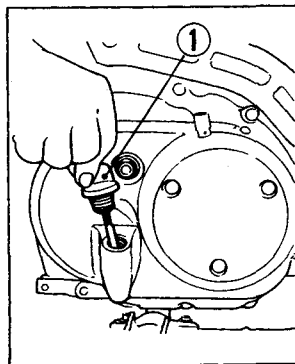

(1) Oil filler cap/dipstick
(2) Upper level mark

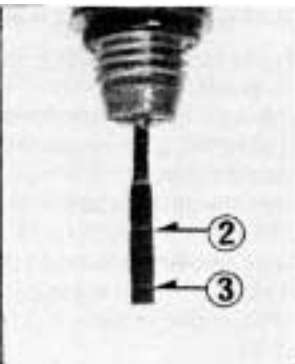

(3) Lower level mark