

WARNING

- * *Maintain proper tire air pressure. Improperly inflated tires may adversely affect maneuverability and may cause loss of control.*
- * *When replacing tires use only the size, type and brand identified in the chart. The use of different sizes or types of tire can severely effect vehicle handling.*

If you have a flat tire, use the plug method to make temporary repairs. The plug method is the same as that for conventional tubeless tires. A plug type repair kit, which is available at most auto part stores or service stations, provides a plug, an installation tool, tire cement, and an instruction sheet. Follow the instructions provided in the repair kit to make a temporary repair until the tire can be permanently repaired by the cold patch method. Any tire which cannot be repaired by the plug method should be replaced.

Whenever the FOUR TRAX is to be operated far from service facilities or available transportation, we recommend that the rider carry a tire pump and a suitable repair kit with the FOUR TRAX.

Tire Tread Condition

Measure the groove depth (1) of tires at the center as shown. Operating the vehicle with excessively worn tires will decrease traction and cause skidding.

WARNING

- * *Replace tires before tread depth at the center of the tires reaches the following limit.*

Minimum tread depth
4 mm (0.16 in)

