


ENGINE OIL CENTRIFUGAL FILTER

1. Remove the right crankcase cover (page 47).
2. Remove the centrifugal filter cover (1) by removing the three bolts (2).
3. Clean the inside of the cover and filter.
4. Make sure the cover gasket is in good condition and reinstall the centrifugal filter cover.

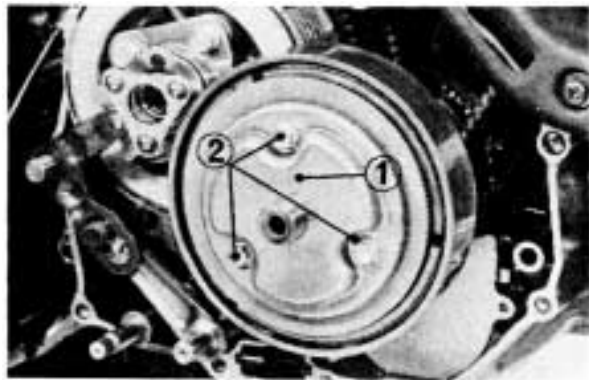

(1) Filter cover (2) Bolts

Installation

- Reinstall the centrifugal oil filter by reversing the disassembly sequence.
- Tighten the right crankcase cover bolts (page 47).
- Tighten the centrifugal oil filter cover bolts to 10–14 N·m (1.0–1.4 kg·m, 7–10 ft·lb).

WARNING

- * *If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly.*

