

	FREQUENCY	ITEMS	Which ever comes first ⇒	INITIAL		REGULAR		Refer to page
				MAINTENANCE		MAINTENANCE INTERVAL		
				mi	100	600	1200	
				km	150	1000	2000	
NOTE	HOURS	20	100	200				
NON EMISSION RELATED ITEMS		REAR FINAL GEAR CASE OIL				(R: EVERY 2YEARS)		98
	*	BRAKE FLUID	(NOTE3)					108
	*	BRAKE SHOE WEAR	(NOTE1)					113
	*	BRAKE PAD WEAR	(NOTE1,2)					109
		BRAKE SYSTEM						107 – 114
	*	REVERSE LOCK SYSTEM						102
		SKID PLATES, ENGINE GUARD						121
	*	CLUTCH SYSTEM						101
	*	SUSPENSION						—
	*	SPARK ARRESTER				C	C	122
	*	NUTS, BOLTS, FASTENERS						—
	**	WHEELS/TIRES						115 – 119
	**	STEERING SHAFT HOLDER BEARINGS						
**	STEERING SYSTEM						—	

- * SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.
- ** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

NOTES: 1. Service more frequently when riding in dusty areas, sand or snow.
 2. Service more frequently after riding in very wet or muddy conditions.
 3. Replace every 2 years. Replacement requires mechanical skill.