

# Controls & Features

---

## Front Brake Lever


The front brake lever is used to slow or stop your ATV. To operate, pull the lever. For information on braking techniques, see page 55 .

## Rear Brake Pedal

The rear brake pedal is used to slow or stop your ATV. To operate, depress the pedal. For information on braking techniques, see page 55 .

## Parking Brake

### LEFT HANDLEBAR

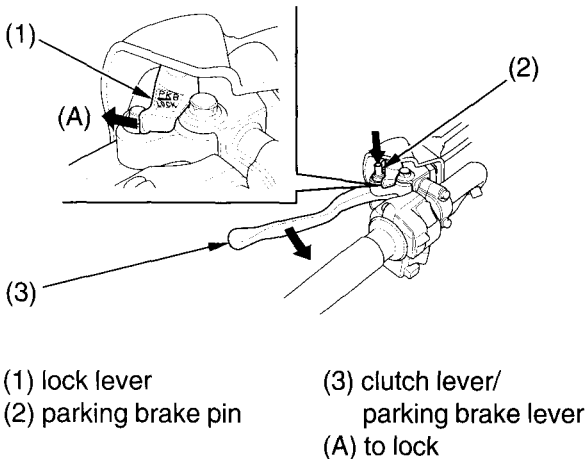

The lock lever ( 1 ) and parking brake pin ( 2 ) on the clutch/parking brake lever ( 3 ) allows it to be used as a parking brake. To operate, push down and hold the parking brake pin, squeeze the clutch lever/parking brake lever and then lock it with the lock lever. See *Parking* page 69 .