


Choke Lever

The choke lever (1) is next to the left handlebar grip. Move the choke lever while pushing it to the left for starting the engine when cold. Move the lever while pushing it to the right as the engine attains normal operating temperature.

To restart a warm engine, it is not necessary to use the choke.

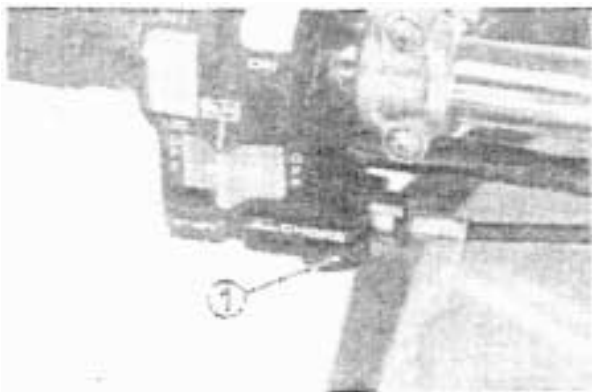

(1) Choke lever

Brake Lever/Parking Brake


The front brake lever is at the right handlebar grip. The left brake lever (1) and the brake pedal both operate the rear brake. Either one can be used to stop the FOUR TRAX. The left brake lever has the added feature of a lock (2) which allows the lever to be used as a parking brake.

Pull the left brake lever back and lock it with the lock. Always apply the parking brake when parking the FOUR TRAX and when starting the engine.

The parking brake is unlocked by squeezing the left brake lever.

NOTE:

- * Use of the parking brake in freezing weather may cause the brakes to freeze in the locked position.

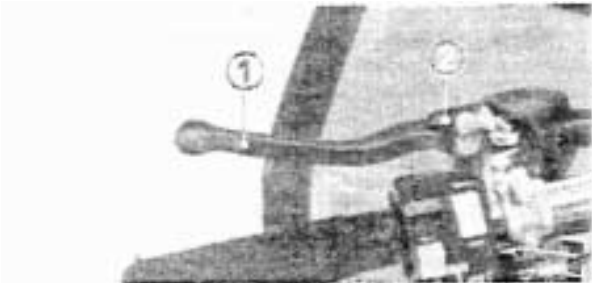

(1) Brake lever/Parking brake
(2) Lock