

OPERATION

PRE-RIDE INSPECTION

WARNING

* *Failure to conduct the listed maintenance checks and adjustments may lead to equipment failure that could cause an accident.*

Inspect your FOUR TRAX every day before you ride it. The items listed here will only take a few minutes to check and in the long run can save time, expense, and possibly your life.

1. Engine oil level – if required add engine oil (page 23). Check for leaks.
2. Fuel level – fill the fuel tank when necessary (page 22). Check for leaks.
3. Brakes – check operation; make sure there is no brake fluid leakage. If necessary adjust free play (page 56).
4. Tires – check condition and pressure (page 25).
5. Throttle – check for smooth opening and closing in all steering positions (page 61).
6. Headlight and headlight dimmer switch – check for proper function (page 11).

7. Engine stop switch – check for proper function (page 10).
8. Nuts, Bolts, Fasteners – check the wheels to see that the axle nuts are tightened and secured by cotter pins. Check the security of all other nuts, bolts and fasteners.
9. Steering – check that the wheels turn properly as you steer the handlebars.
10. Check that all cargo is properly secured.

Correct any discrepancy before you ride. Contact your authorized Honda dealer for assistance if you cannot correct the problem.