

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇨	km	150	1000	2000	
			mi	100	600	1200	
		NOTE	HOURS	20	100	200	
*	FUEL LINE					I	—
*	THROTTLE OPERATION					I	116
*	CARBURETOR CHOKE					I	118
	AIR CLEANER	NOTE 1			C	C	111—114
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	115
	SPARK PLUG				I	I	123
*	VALVE CLEARANCE			I	I	I	126
	ENGINE OIL			INITIAL=150km (100mi), 20 operating hours or 1 month : R REGULAR=Every 1000km (600mi), 100 operating hours or 12 months : R			102—108
**	ENGINE OIL STRAINER SCREEN					C	—
**	ENGINE OIL CENTRIFUGAL FILTER					C	—
*	ENGINE IDLE SPEED			I	I	I	121

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Shop Manual.

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.