


# Gear Case Oil

---

1. Park the ATV on level ground.
2. Place an oil drain pan under the oil drain plug ( 1 ).
3. Remove the oil filler cap ( 2 ) and the drain plug.
4. After the oil has completely drained, reinstall the drain plug and tighten it to the specified torque:  
12 N·m ( 1.2 kgf·m , 9 lbf·ft)
5. Fill the gear case with the recommended oil.  
80 cm<sup>3</sup> ( 2.7 US oz , 2.8 Imp oz)
6. Remove the oil level check bolt ( 3 ). Make sure the oil level reaches the oil level check hole ( 4 ).
7. Install the oil filler cap and oil level check bolt.

## REAR

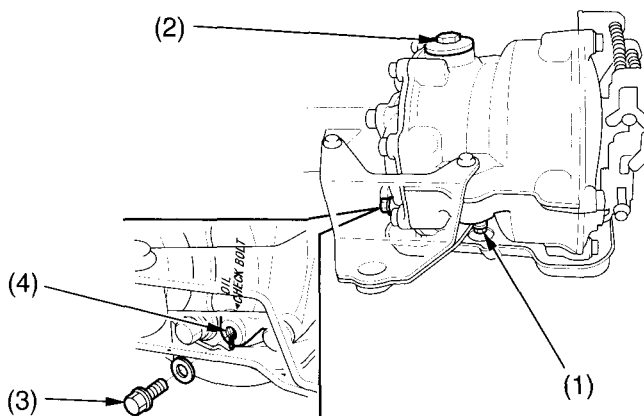

(1) oil drain plug  
(2) oil filler cap

(3) oil level check bolt  
(4) oil level check hole