

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 178).

For information about carburetor adjustment for riding at high altitude, see page 179.

| | |
|----------------------------------------------|----|
| Safe Riding Precautions | 43 |
| Off-Road Use Only | 43 |
| Keeps Hands and Feet on Controls | 44 |
| Control Speed..... | 45 |
| Use Care on Unfamiliar or Rough Terrain..... | 46 |
| Do Not Perform Stunts..... | 47 |
| Starting & Stopping the Engine | 48 |
| Preparation | 48 |
| Starting Procedure | 49 |
| Flooded Engine | 52 |
| How to Stop the Engine | 52 |
| Using the Recoil Starter | 53 |
| Shifting Gears | 54 |
| Riding in Reverse..... | 56 |

(cont'd)