

Maintenance Schedule

FREQUENCY ITEMS		WHICHEVER COMES FIRST ⇔	mi km	INITIAL	REGULAR		Refer to page
				MAINT.	MAINT. INTERVAL		
			100	600	1200		
		NOTE	HOURS	20	100	200	
	REAR FINAL GEAR CASE OIL				(EVERY 2 YEARS)		98
*	BRAKE FLUID	NOTE 3					116
*	BRAKE SHOE WEAR	NOTE 1					127
*	BRAKE LIGHT SWITCH						128
	BRAKE SYSTEM						116
*	REVERSE LOCK SYSTEM						109
	SKID PLATES, ENGINE GUARD						137
*	CLUTCH SYSTEM						108
*	SUSPENSION						—
*	SPARK ARRESTER				C	C	115
*	NUTS, BOLTS, FASTENERS						—
**	WHEELS/TIRES						—
**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 188).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.