


# Reverse Lock System


## Reverse Lock System Adjustment

Refer to *Safety Precautions* on page 83 .

### LEFT HANDLEBAR

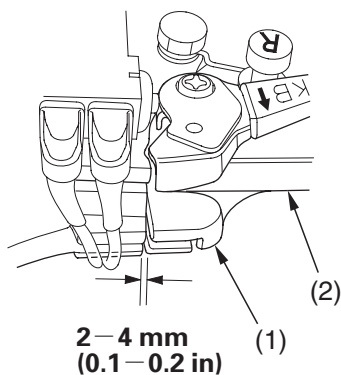

- (1) reverse assist lever
- (2) rear brake lever/  
parking brake lever
- (3) lock nut

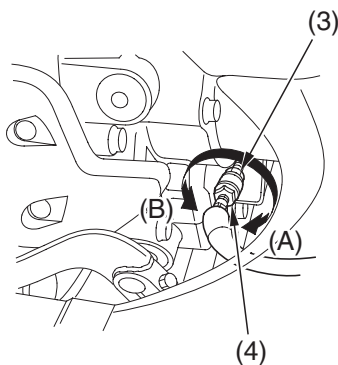

- (4) adjusting nut
- (A) decrease freeplay
- (B) increase freeplay

1. Check the reverse assist lever (1) freeplay, measured at the rear brake lever/parking brake lever (2) end near the cable:  
2-4 mm (0.1-0.2 in)
2. To adjust, loosen the lock nut (3) and turn the adjusting nut (4).  
After adjustment, tighten the lock nut securely.

### Other Checks

Check the reverse assist lever and cable for loose connections or other damage. If the cable is worn or kinked, have it replaced by your Honda dealer.