

### Starting Procedure (After Preparation)

To restart a warm engine, follow the procedure for High Air Temperature.

The starter motor will operate only when the transmission is in neutral.

#### Normal Air Temperature

$10^{\circ}-35^{\circ}\text{C}$  ( $50^{\circ}-95^{\circ}\text{F}$ )

1. Pull the choke knob up all the way to Fully ON (A).
2. With the throttle slightly open, push the starter button.

#### CAUTION:

- \* Pressing the electric starter button for more than 5 seconds at a time may cause the starter to overheat and damage the starter. Release the starter button for approximately 10 seconds before pressing it again.

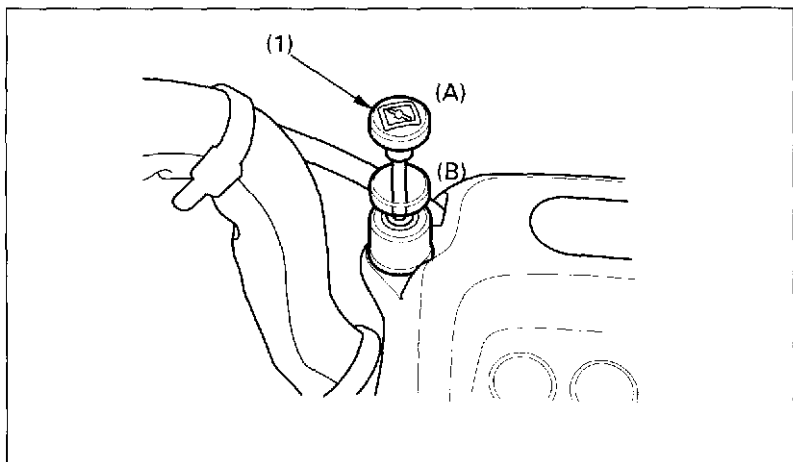


Fig. 3-9 (1) Choke knob

(A) Fully ON  
(B) Fully OFF

3. Warm up the engine by opening and closing the throttle slightly.
4. About a half minute after the engine starts, push the choke knob down all the way to Fully OFF (B).
5. If idling is unstable, open the throttle slightly.