

| D<br>U | FREQUENCY<br><br>ITEMS         | Whichever comes first |     | INITIAL MAINTENANCE |                   | REGULAR MAINTENANCE INTERVAL |   | Refer to page |
|--------|--------------------------------|-----------------------|-----|---------------------|-------------------|------------------------------|---|---------------|
|        |                                | ⇨                     | mi  | 100                 | 600               | 1200                         |   |               |
|        |                                |                       | km  | 150                 | 1000              | 2000                         |   |               |
| NOTE   | HOURS                          | 20                    | 100 | 200                 |                   |                              |   |               |
|        | REAR FINAL GEAR CASE OIL       |                       |     |                     | (R: EVERY 2YEARS) | I                            |   | 104           |
| *      | BRAKE FLUID                    | (NOTE3)               |     |                     |                   | I                            | I | 116           |
| *      | BRAKE SHOE WEAR                | (NOTE2)               |     |                     |                   |                              | I | 121           |
|        | BRAKE SYSTEM                   |                       |     |                     |                   | I                            | I | 113-122       |
| *      | REVERSE LOCK SYSTEM            |                       |     |                     |                   | J                            | I | 108           |
|        | SKID PLATES, ENGINE GUARD      |                       |     |                     |                   |                              | I | 129           |
| *      | CLUTCH SYSTEM                  |                       |     |                     |                   | I                            | I | 107           |
| *      | SUSPENSION                     |                       |     |                     |                   |                              | I | -             |
| *      | SPARK ARRESTER                 |                       |     |                     |                   |                              | C | 130           |
| *      | NUTS, BOLTS, FASTENERS         |                       |     |                     |                   | I                            | I | -             |
| **     | WHEELS/TIRES                   |                       |     |                     |                   | I                            | I | 123-127       |
| **     | STEERING SHAFT HOLDER BEARINGS |                       |     |                     |                   |                              | I | -             |
| **     | STEERING SYSTEM                |                       |     |                     |                   |                              | I | -             |

\* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

\*\* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Service more frequently after riding in very wet or muddy conditions.
  2. Service more frequently when riding in dusty areas, sand or snow.
  3. Replace every 2 years. Replacement requires mechanical skill.