

## WHEELS AND TYRES

### WHEEL REMOVAL

If you need to remove a wheel from your FOURTRAX, follow these procedures:

1. Raise the front (or rear) wheels off the ground and place a support securely under the vehicle.
2. Loosen the wheel nuts (Fig. 4-30) with a 17 mm socket wrench.
3. Remove the wheel.

When reinstalling a wheel, tighten the wheel nuts in a crisscross (rather than a circular) pattern.

Wheel nuts torque:

64 N·m (6.5 kgf·m , 47 lbf·ft)

Be sure the tapered side of the wheel nuts face the wheel rim (2).

## **▲ WARNING**

### **POTENTIAL HAZARD**

**Installing wheels improperly.**

### **WHAT CAN HAPPEN**

**A wheel may come loose, possibly leading to an accident.**

### **HOW TO AVOID THE HAZARD**

**Carefully follow the instructions in this Owner's Manual when installing wheels.**