




Starting & Stopping the Engine

Always follow the proper starting procedure described below.

For your safety, avoid starting or operating the engine in an enclosed area such as a garage. Your ATV's exhaust contains poisonous carbon monoxide gas which can collect rapidly in an enclosed area and cause illness or death.

Your ATV is equipped with a gear position starter cut-off system. The engine cannot be started if the transmission is in a forward or reverse gear.

Preparation

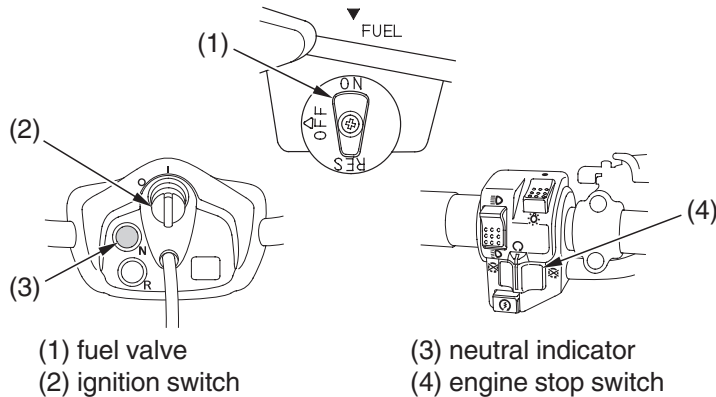

1. Before starting, select a level surface and lock the parking brake (page 23).
2. Turn the fuel valve (1) and ignition switch (2) to ON (I).

Confirm the following:

- The transmission is in neutral (neutral indicator (3) ON).
- The engine stop switch (4) is set to RUN (O).

46 Basic Operation & Riding

