

# PARTS OPERATION

## POWER CONTROLS

### Ignition Switch

The ignition switch (Fig. 2-4) is in the center of the handlebars directly in front of the seat.

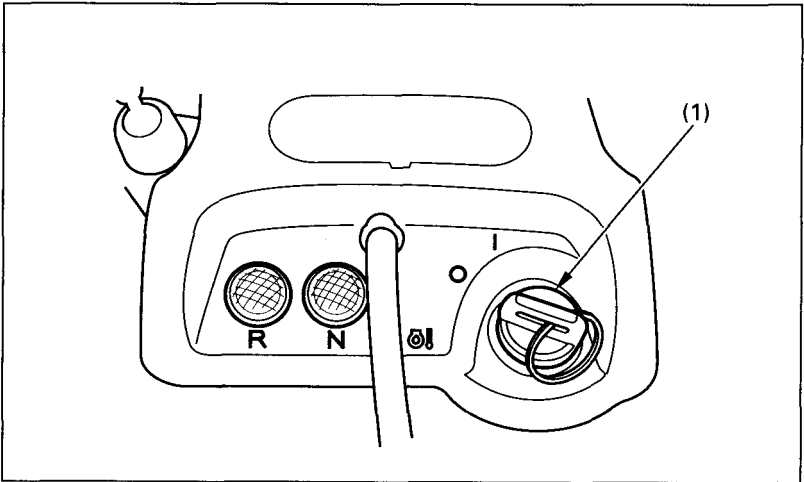


Fig. 2-4

(1) Ignition switch

Key Position	Function	Key Removal
○ (OFF)	The engine and headlight cannot be operated.	The key can be removed.
I (ON)	The headlights can be turned on. With the engine stop switch at RUN and the transmission in neutral, the engine can be started.	The key cannot be removed.