

Reverse and Neutral Indicator Lamp

The reverse indicator lamp (1) and the neutral indicator lamp (2) (Fig. 2-11) are located on the headlight case.

The reverse indicator lamp will light when the transmission is in reverse and the ignition switch is ON. The neutral indicator lamp will light when the transmission is in neutral and the ignition switch is ON.

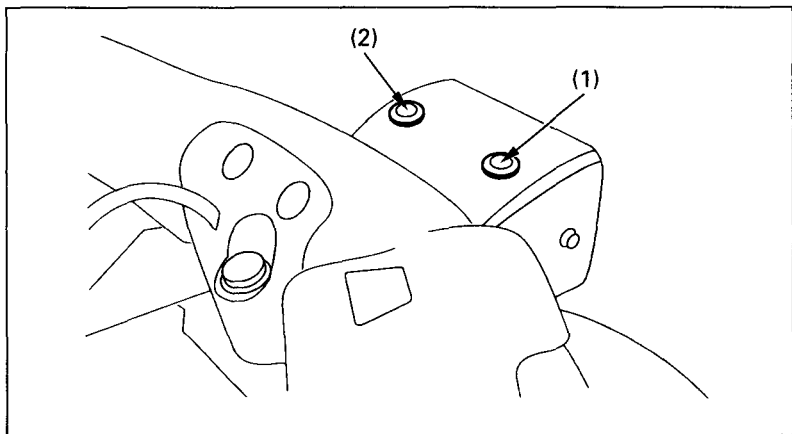


Fig. 2-11

(1) Reverse indicator lamp
(2) Neutral indicator lamp