

Battery Removal

1. Make sure the ignition switch is OFF.
2. Remove the seat (page 127).
3. Remove the battery holder (1), (Fig. 4-20) by removing the mount bolts (2).
4. Disconnect the negative (-) terminal lead (3) from the battery (4) first, then disconnect the positive (+) terminal lead (5).
5. Remove the battery.
 - * Install in the reverse order of removal.
 - * Check all bolts and other fasteners are secure.